


LALUNA

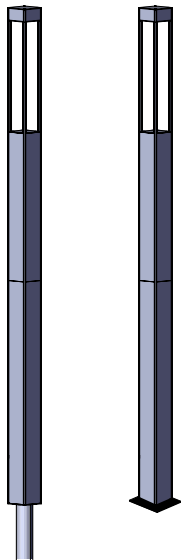

ENG	INSTALLATION INSTRUCTIONS	ITA	ISTRUZIONI DI INSTALLAZIONE	NLD	INSTALLATIE INSTRUCTIES	DAN	INSTALLATIONSVEJLEDNING	HUN	TELEPÍTÉSI ÚTMUTATÓ
DEU	INSTALLATIONSANLEITUNG	POL	INSTRUKCJE MONTAŻU	RUS	Инструкции по установке	RON	INSTRUCȚIUNI DE INSTALARE	CHI	安装说明
FRA	INSTRUCTIONS DE MONTAGE	SPA	INSTRUCCIONES DE INSTALACIÓN	POR	INSTRUÇÕES DE INSTALAÇÃO	SWE	INSTALLATIONSANVISNING	UKR	Інструкції з монтажу
SRP	UPUTSTVA ZA INSTALACIJU	AR	تعليمات التركيب						



IP

65

IK


06

Control gear must be SELV/PELV!

U_{out max}=120V



12-24VDC

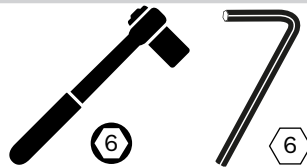

ALL THE TIGHTENING TORQUES VALUES ARE GIVEN
FOR ASSEMBLIES WITHOUT THE ADDITION OF A
GREASE DECREASING FRICTION.


PARTS LIST

1x




INSTALLATION STEPS


1

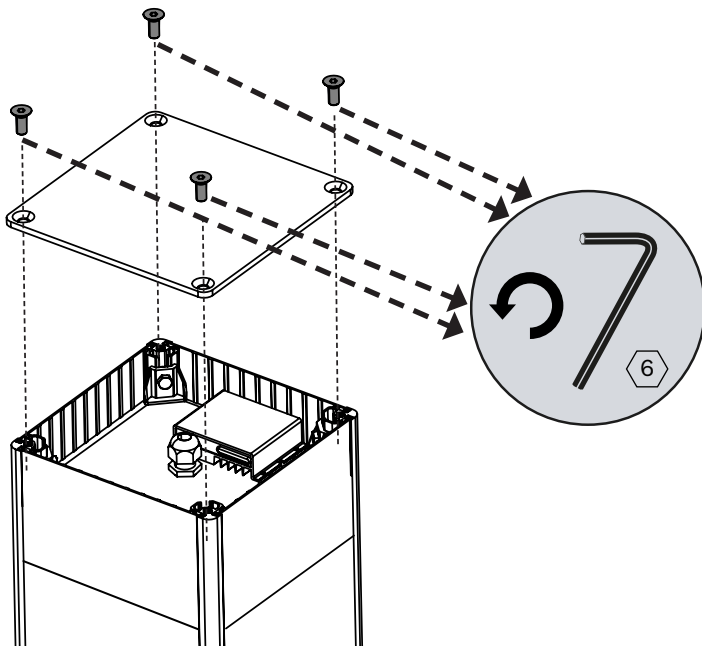


2

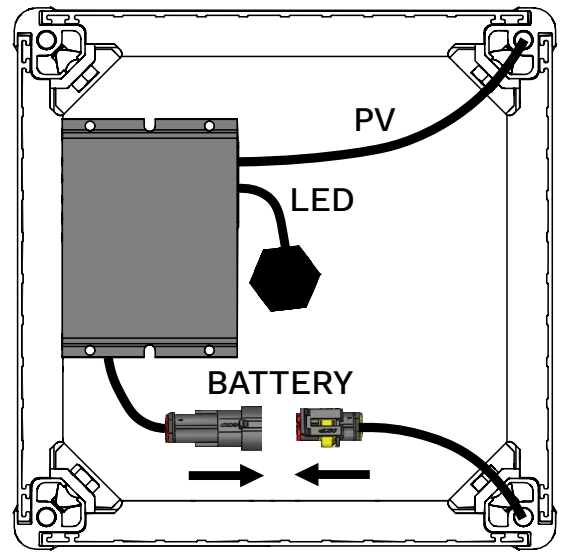

3

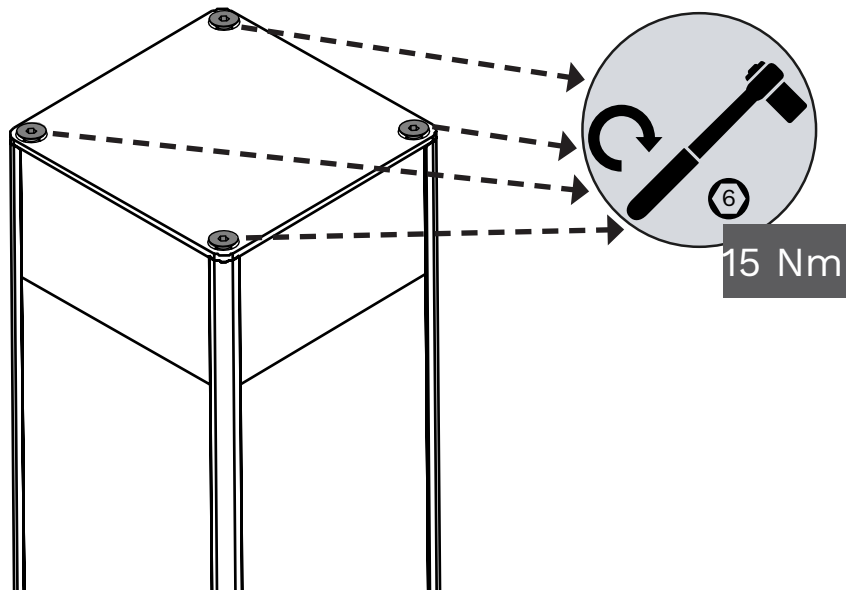

MOUNTING OPTION 1 - PIPE FOUNDATION

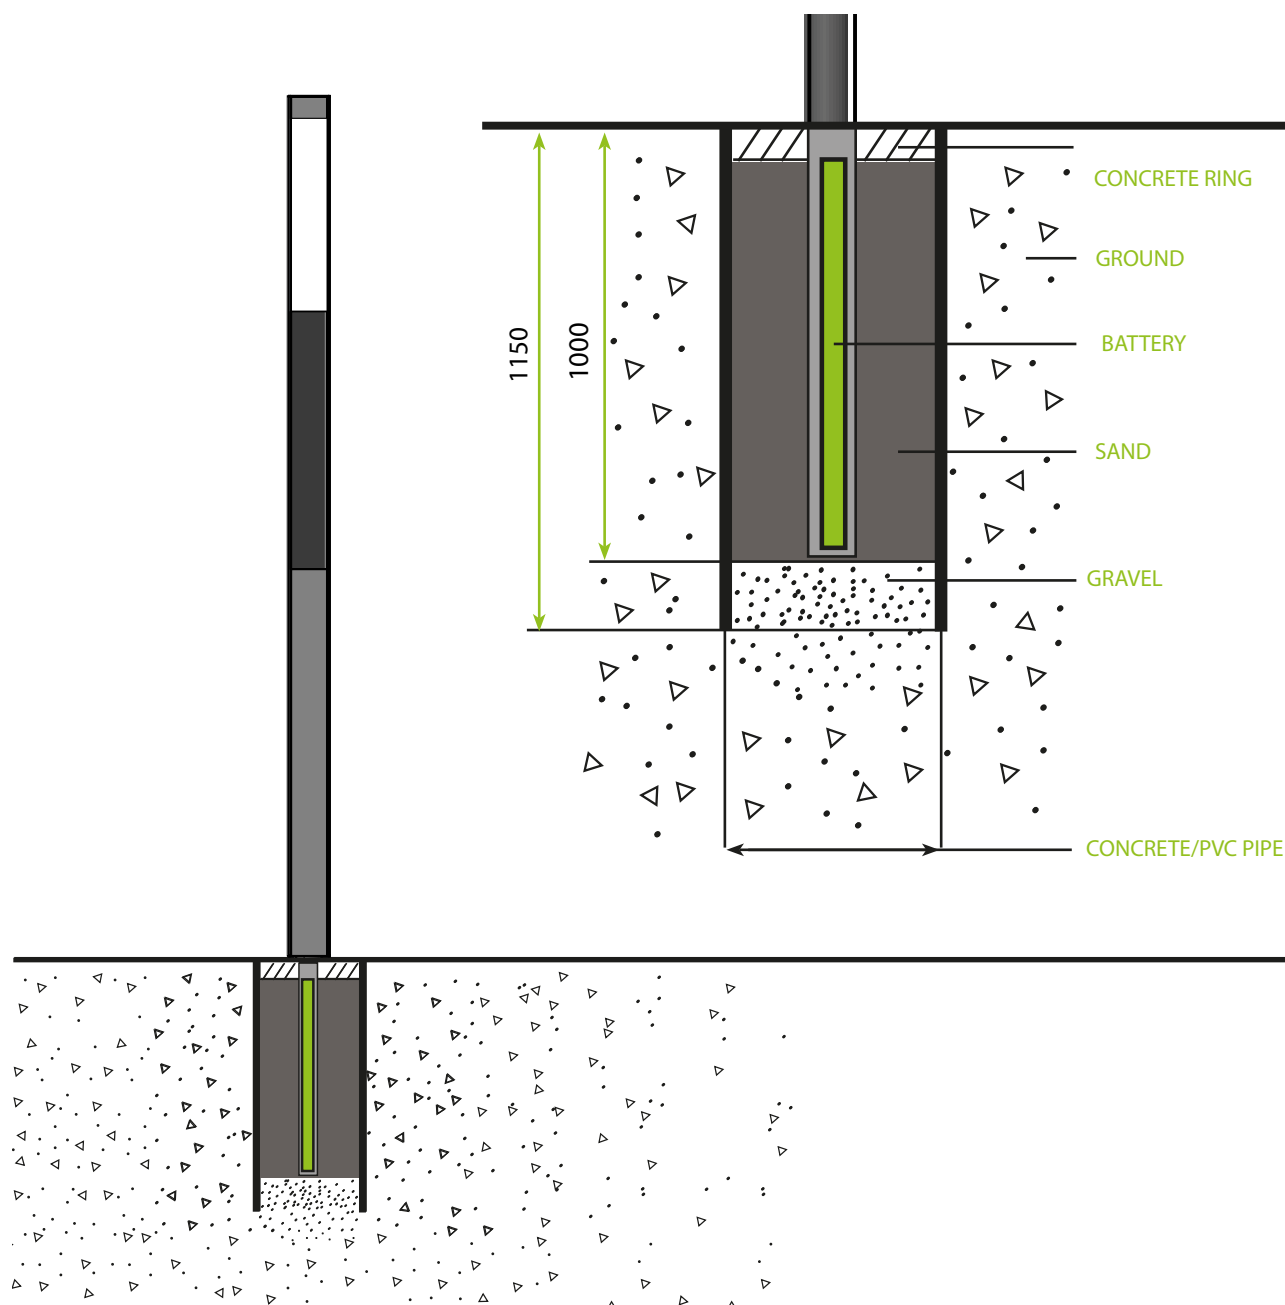

MOUNTING OPTION 2 - ANCHOR BASE

